

Finalising DVDs

DVD-R, DVD-RW, DVD+R, DVD+RW


Before a recorded DVD can be played in a standard DVD player it must first be finalised. This creates the top menu recognised by standard DVD players.

Please note that it is **NOT** possible to finalise a DVD-RAM Disk.

Select



Press

You will see

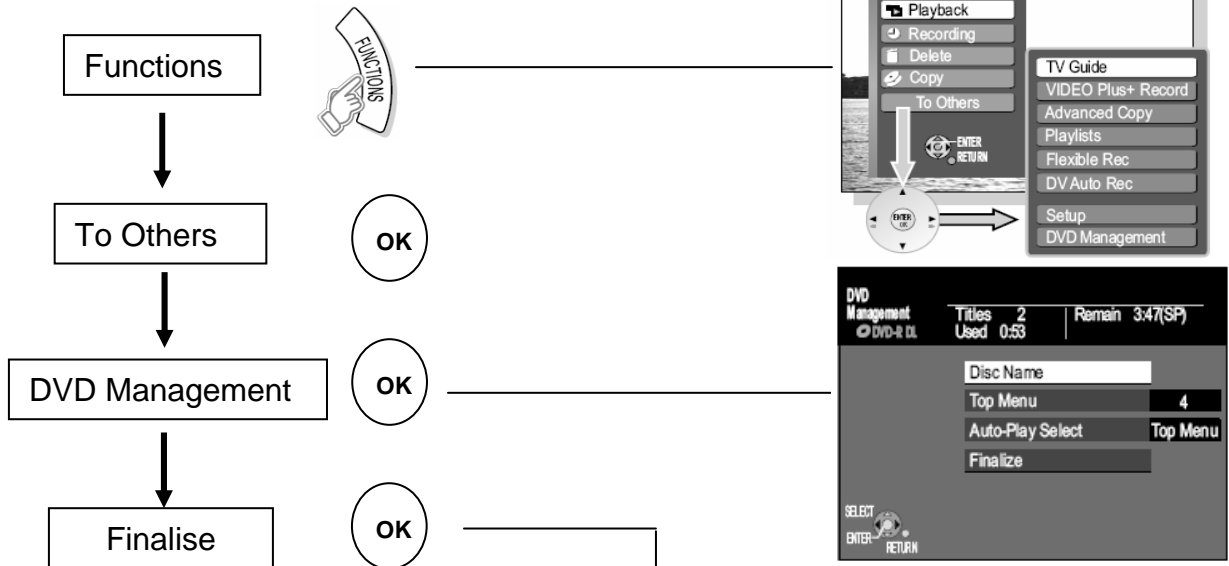

When using DVD+RW Disks the option to “Finalise is replaced with “Create Top Menu”. Select this option and press OK

You will be asked to confirm that you wish to start the finalisation process

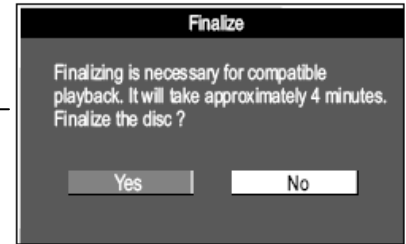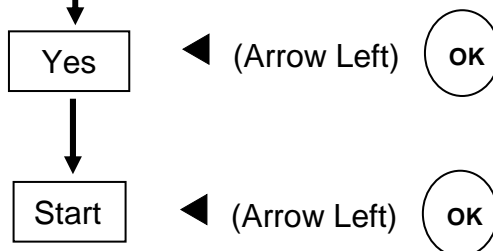

The finalisation process will now begin. This takes around 4 minutes.

Press “OK when finished.

OK

It will now be possible to play the finalised DVD disk in most standard DVD Players. It is not possible to finalise DVD-RAM disks. Only DVD Recorders can play these disks.