
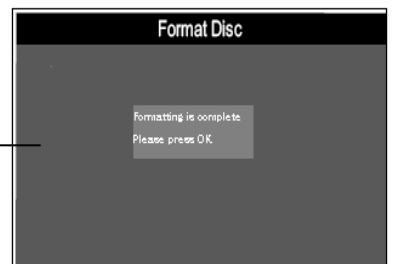
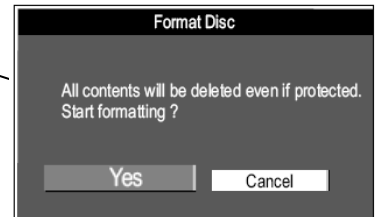
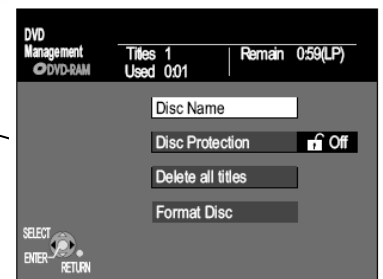
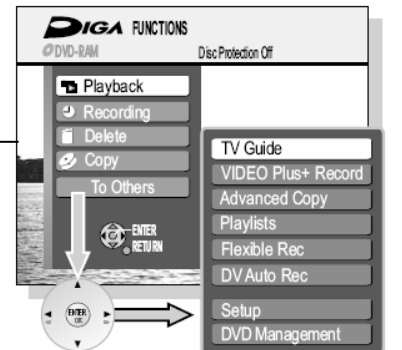


Formatting DVDs

Rewriteable DVD disks such as DVD-RW DVD+RW and DVD RAM should be formatted prior to recording. Often the DVD recorder will prompt the user to format them when inserted. If not format as follows.

Select Press

You will see

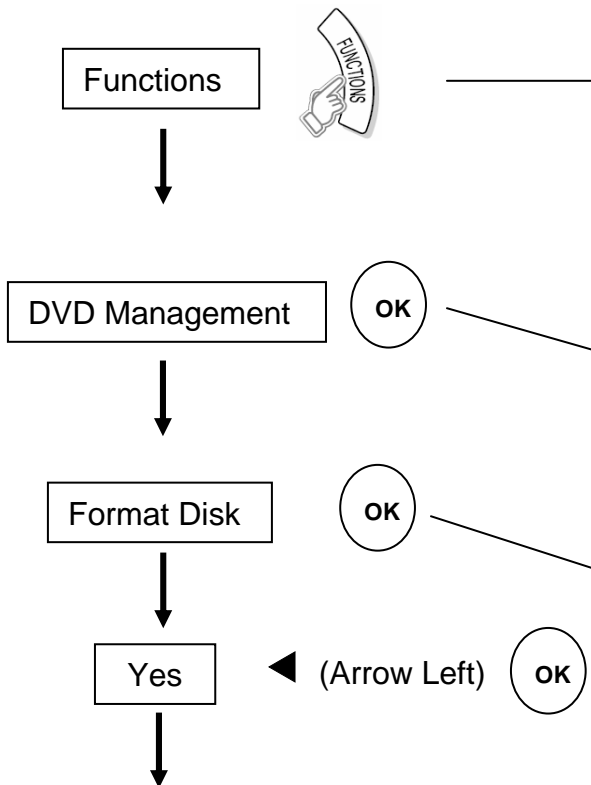

Confirm "Yes" when asked "Are you sure?"

**Formatting begins –
(Usually completes within 1 minute)**

Press



Remember: DVD-R and DVD+R cannot be formatted.