
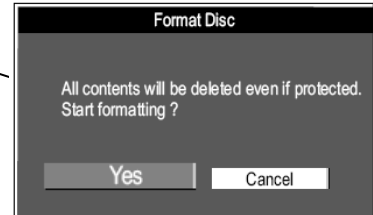
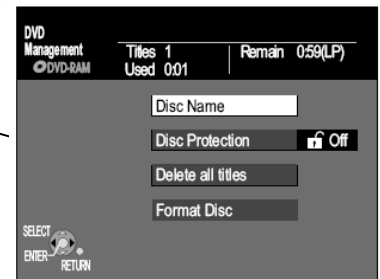
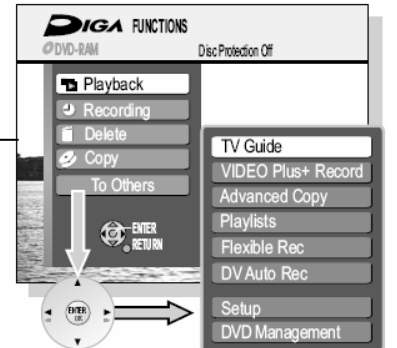


# Formatting DVDs

Rewriteable DVD disks such as DVD-RW DVD+RW and DVD RAM should be formatted prior to recording. Often the DVD recorder will prompt the user to format them when inserted. If not format as follows.

**Select Press**

**You will see**

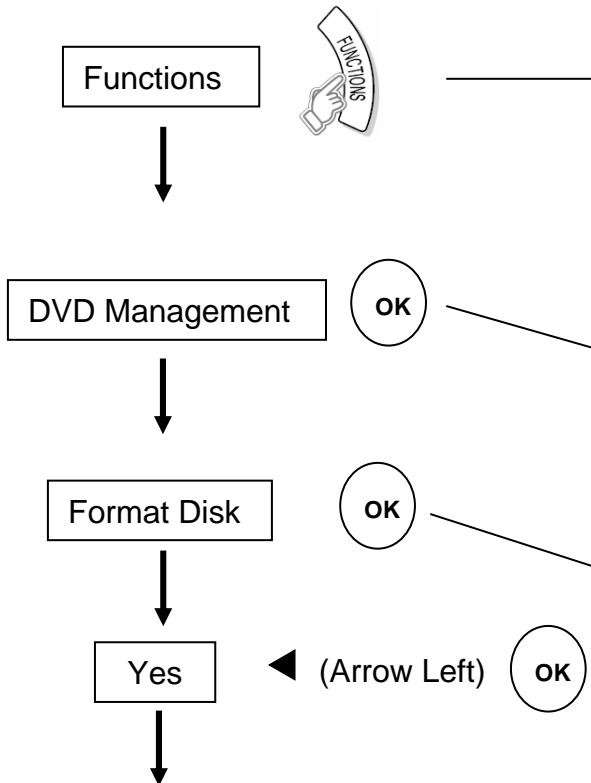

Confirm "Yes" when asked "Are you sure?"

**Formatting begins –  
(Usually completes within 1 minute)**

**Press**

OK

Remember: DVD-R and DVD+R cannot be formatted.