

Recording from a Video Recorder

Making simple recordings from a Video Recorder on to hard disk or straight on to DVD is possible. The Video Recorder must be connected to one of the unit's AV inputs. AV2 Scart is can be used for this purpose but AV3 (the front inputs) can be used if more convenient.

Preparation:

Connect the Video Recorder to AV2 Scart socket. The front AV Inputs (AV3) could be used if preferred

Switch on the Video Recorder and prepare it for playback (Play/Pause).

Switch on the TV and select the input used for the DVD Recorder on the TV Remote

Press the Input select button (DVD remote control) repeatedly to select the correct input (AV2). (If using the front inputs select AV3) The AV input selected will be shown on the unit's display



Select

Press

You will see

Select the drive that you want to record to.
HDD or DVD



Select the preferred recording quality mode.
XP, SP, LP or EP




Press the record button (DVD Recorder) and begin playback of the Video Recorder together



When you have finished recording press the stop button on both the DVD Recorder and on the Video Recorder



If the recording was made straight onto a DVD disk, don't forget to finalise the disk before trying to play it on a standard DVD player. DVD RAM disks cannot be finalised and will not therefore play on most standard DVD players.

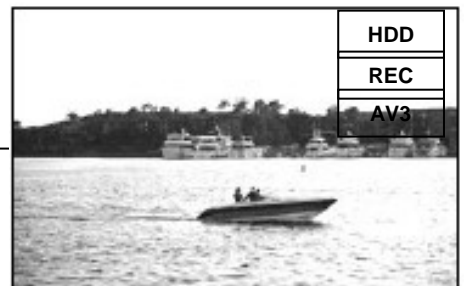

Playback & Recording begins