

Recording from an Analogue Camcorder


Making simple recordings from an analogue camcorder on to hard disk or straight on to DVD is possible. The camcorder must be connected to one of the unit's AV inputs. Usually the front inputs (AV3) are the most convenient for this.

Preparation:

Connect the Camcorder to the front AV inputs as shown.

Switch on the camcorder and prepare it for playback (Play/Pause).
Switch on the TV and select the input used for the DVD Recorder on the TV Remote

Press the Input select button (DVD remote control) repeatedly to select the correct input (AV3). The AV input selected will be shown on the unit's display

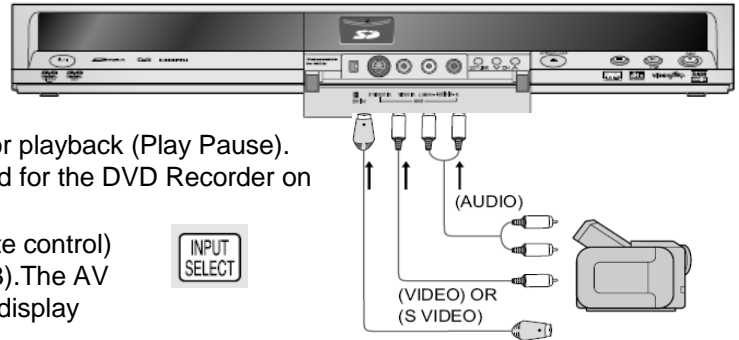

Select

Press

You will see


Select the drive that you want to record to.
HDD or DVD



Select the preferred recording quality mode.
XP, SP, LP or EP



Press the record button (DVD Recorder) and begin playback of the camcorder together

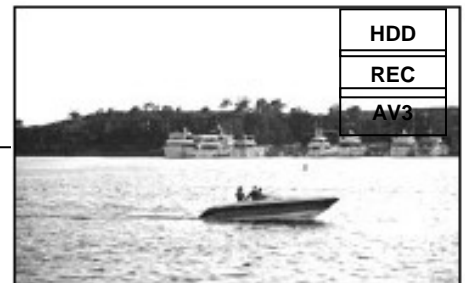

When you have finished recording press the stop button on both the DVD Recorder and on the Camcorder



Playback & Recording begins



If the recording was made straight onto a DVD disk, don't forget to finalise the disk before trying to play it on a standard DVD player. DVD RAM disks cannot be finalised and will not therefore play on most standard DVD players.