

# AV Output Settings

Changing the AV output settings will adjust the way in which the DVD Recorder auto-switches the TV. This unit can be set to take control of the TV either: Immediately that this unit is switched on OR Only when Play is pressed or a menu selected

