

Recording from the TV Guide

The TV Guide provides an overview of Digital TV and Radio programmes being broadcast over the coming 7 days. Up to 32 programmes can easily be selected for timer recording.


Select

Press

You will see



TV channels are shown down left hand column and times along the top of the screen

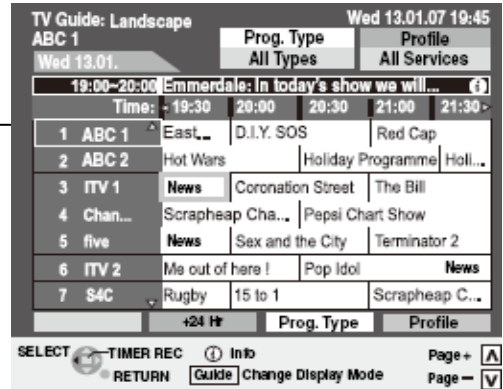

Use **▲** and **▼** to select the channel and then **◀** and **▶** to highlight the desired programme (time).



Press **OK** when the desired program is highlighted




Confirm the programme details. Use **◀** and **▶** to select any details that you wish to adjust then **▲** and **▼** make the changes.



The screen reverts back to **TV Guide** allowing you to set more programmes to record. Up to 32 can be set.

Programmes set to record are marked with a clock symbol on the **TV Guide**. The same symbol will light on the unit's display to indicate recordings have been set.

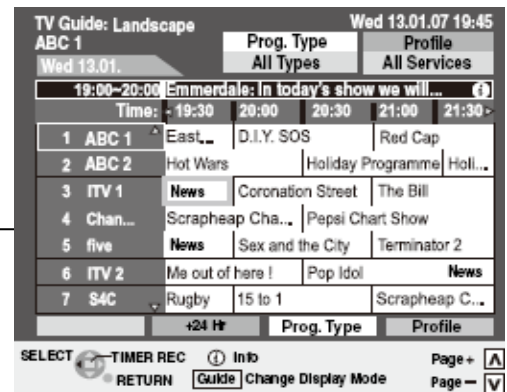

Press **Return** (when finished) to leave the **TV Guide**

